

WTI Part No.: 12927
Rev. D

NPS Series

Network Power Switch



**Models NPS-115 & NPS-230
(Firmware Version 2.04 and Higher)**

User's Guide

wti western™
telematic inc.

5 Sterling • Irvine • California 92618
(949) 586-9950 • Toll Free: 1-800-854-7226
Fax: (949) 583-9514 • <http://www.wti.com>

Table of Contents

1. Introduction	1
2. Unit Description	2
2.1. Front Panel	2
2.2. Back Panel	3
3. Installation	4
3.1. Option Switches	4
3.2. Console Port Connection	4
3.3. Connecting an External Modem	5
3.4. Connecting the Network Cable	5
3.5. Power Supply Connection	5
3.6. Connection to Switched Outlets	5
3.7. Reset Unit to Defaults	5
3.7.1. Default Parameters Option	6
3.7.2. Default Button (Local)	6
4. Start-Up / Configuration	7
4.1. System Mode and User Mode	7
4.2. Communicating with the NPS	8
4.3. NPS Command/Menu Conventions	10
4.4. Defining General Parameters	10
4.5. Plug Parameters	12
4.6. Network Parameters	13
4.6.1. Implementing IP Security	14
4.7. Save Configuration Parameters	15
5. Operation	16
5.1. Access the NPS Command Mode	16
5.2. Displaying Plug Status	17
5.3. Boot/On/Off Commands	18
5.3.1. Applying Commands to Several Plugs	19
5.4. The Default Command	19
5.5. Other Commands	20
5.5.1. Login as Different User	20
5.5.2. Reset Network Port	20
5.5.3. Exit / Disconnect	20
5.6. Operating Tips	20
6. Saving and Restoring Configuration Parameters	21
6.1. Sending Parameters to a File	21
6.2. Restoring Saved Parameters	22

Appendices

A. Interface Descriptions Apx-1
 A.1. Console Port Interface Apx-1
 A.2. Modem Port Interface Apx-1

B. Specifications Apx-2

C. Customer Service Apx-3

Index Index-1

List of Figures

1. Front Panel 2

2. Back Panel (Model NPS-115 Shown) 3

3. System Help Screen 9

4. User Help Screen 9

5. General Parameters Menu (System Mode Only) 11

6. Plug Parameters Menu (Plug 1 Shown) 12

7. Network Parameters Menu (System Mode Only) 13

8. IP Security Menu 14

9. System Status Screen (Passwords Hidden) 17

10. User Status Screen 17

A.1. Console Port Interface Apx-1

A.2. Modem Port Interface Apx-1

1. Introduction

Network equipment sometimes "locks-up", requiring a service call just to flip the power switch to perform a simple reboot. The NPS Network Power Switch gives network administrators the ability to perform this function from anywhere on the LAN/WAN, or if the network is down, to simply dial-in from a modem for out-of-band power control.

Intelligent Power Control

The NPS can communicate over any TCP/IP network using generic Telnet, or out-of-band using an external modem and terminal emulation. Each outlet can be assigned an individual password, device name, reboot delay time and unique power-up default status.

Security and Co-Location Features

Address specific IP security masks prevent unauthorized network access to the NPS command mode. The NPS provides two password security levels; System level and User level. The System password allows access to all configuration and command functions. The User password allows access only to assigned plugs. User level security features are ideal for co-location applications, where multiple users may be allowed plug-specific access to the NPS unit.

Easy to Use, Easy to Configure

Reboots and plug switching are controlled by simple ASCII commands sent to the unit via network, modem or from a local PC. Set-up and configuration is also simple; easy-to-follow menus lead the user through the installation process.

Features:

- Turn On/Off any AC Powered Device via Telnet, Modem or Local Terminal.
- Eight (8) Individual Switched Outlets
- Dual 15 Amp Circuits
- Two Levels of Outlet Specific Password Security plus Network Security
- 115 VAC and 230 VAC Models

Typographic Conventions

Throughout this manual, typefaces and characters have been used to denote the following:

COURIER FONT Indicates characters typed on the keyboard.
For example, **/ON 3** or **/OFF 5**.

[Bold Font] Text set in bold face and enclosed in square brackets indicates a specific key. For example, **[Enter]** or **[Esc]**.

2. Unit Description

2.1. Front Panel

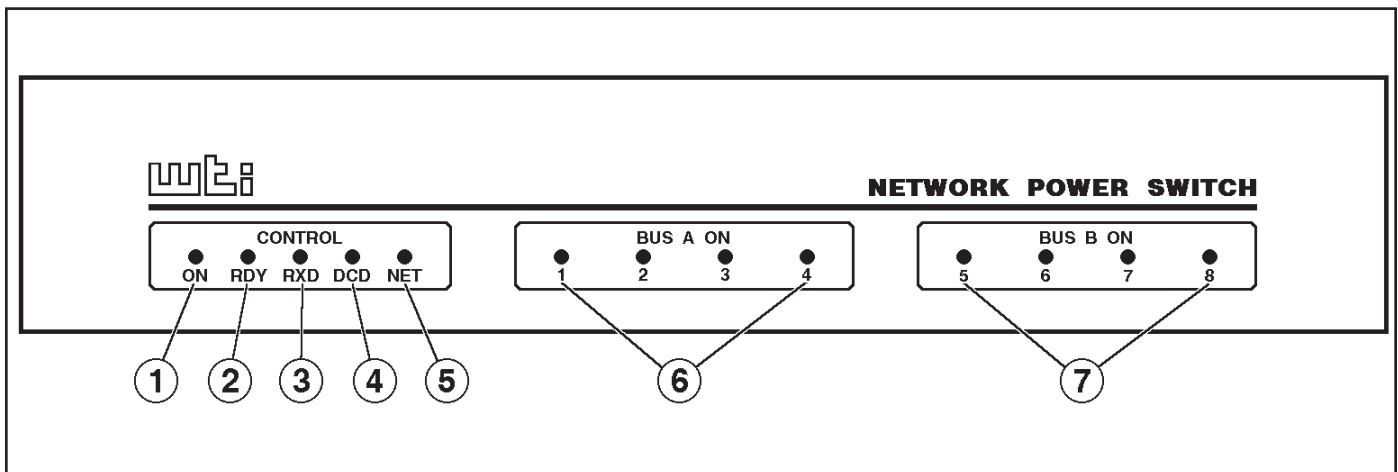


Figure 1: Front Panel

As shown in Figure 1, the NPS front panel includes a series of LED indicators which function as follows:

- ① **ON:** Lights when AC Power is applied to the NPS.
- ② **RDY:** Flashes when the NPS is ready to receive commands.
- ③ **RXD:** Lights when the NPS receives commands.
- ④ **DCD:** Lights when the Modem Port detects the Carrier.
- ⑤ **NET:** Lights when a Telnet session is in progress.
- ⑥ **Bus A Indicators (1 - 4):** Light when the corresponding Plug is switched On.
- ⑦ **Bus B Indicators (5 - 8):** Light when the corresponding Plug is switched On.

2.2. Back Panel

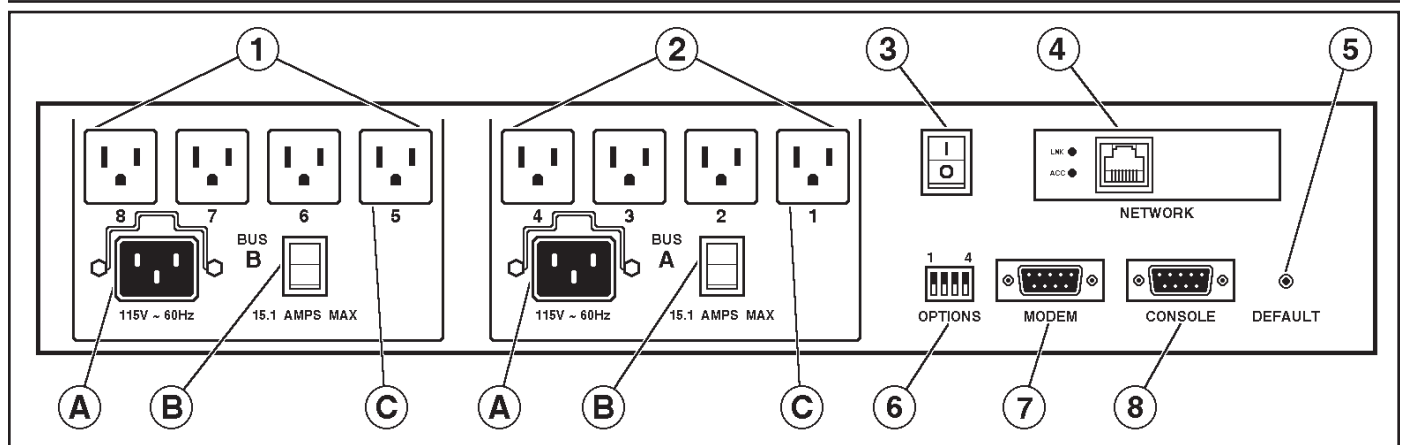


Figure 2: Back Panel (Model NPS-115 Shown)

- ① **Bus B (Plugs 5 - 8):** Includes the following components:
 - A) **Power Inlet with Cable Clamp:** Supplies power for plugs 5 through 8.
 - B) **Circuit Breaker:** NPS-115: 15 Amps;
NPS-230: 10 Amps
 - C) **Switched AC Outlets (5 - 8):** Each outlet can switch up to 15 Amps (NPS-115) or 10 Amps (NPS-230). The total for all four outlets must not exceed 15 Amps for NPS-115, or 10 Amps for NPS-230.
- ② **Bus A (Plugs 1 - 4):** Same as Item 1 above, except the Bus A Power Inlet supplies power to plugs 1 through 4.
- ③ **Master Power Switch:** This switch must be in "On" in order for the NPS to function. This switch is *not* used to set the On/Off status of the switched outlets.
- ④ **Network Port:** An RJ45 Ethernet port for connection to your TCP/IP network. To communicate via Network, you must first specify the IP Address, Subnet Mask and Gateway Address as described in Section 4.6.
- ⑤ **Default Button:** Bypasses the password prompt as described in Section 4.2. Can also reset unit to default settings as described in Section 3.7.
- ⑥ **Option Switches:** A bank of four DIP Switches which select default settings for the baud rate and other features.
- ⑦ **Modem Port:** A Male RS-232, DB9 Connector, DTE configuration. For connection to an external modem.
- ⑧ **Console Port:** A Male RS-232, DB9 Connector, DTE configuration. For connection to a local PC.

3. Installation

3.1. Option Switches

The Option Switches select *default* settings for the Baud Rate, Command Echo, Boot Delay and Disconnect Timeout. Default settings selected via the Option Switches will be used when the unit is reset to default parameters as described in Section 3.7.

Note: Although the Option Switches select *default* settings for these features, the NPS configuration menus can also be used to select *operating* parameters as described in Section 4.

Option Switch settings are described below:

Baud Rate: The default baud rate for the Console Port and Modem Port. This rate will be selected after a power interruption, and when the unit is reset to default parameters.

Boot Delay: The default Boot Delay setting. When a boot cycle is initiated, the Boot Delay determines the length of time that the switched outlet will remain off until power is restored.

Command Echo: The default setting for the Command Echo for the Console Port, Modem Port and Network Port. When enabled, commands entered at your keyboard will be sent to the NPS and echoed back to your display monitor.

Disconnect Timeout: The default Disconnect Timeout value. This determines how long the NPS will wait for additional commands before automatically disconnecting. Note that when the NPS times out, DTR will drop, and the modem disconnect string and initialize string will be sent.

Switch	Function	Up	Down
1	Default Baud Rate	38.4K bps	9600 bps*
2	Default Boot Delay	10 Sec.	5 Sec.*
3	Default Command Echo	Enable	Disable*
4	Default Disconnect Timeout	30 Min	2 Min*

* = Factory Setting

3.2. Console Port Connection

The Console Port is a male, DB9 connector, wired in a DTE configuration (similar to an AT computer), which is used for connection to a local PC or control device. Appendix A describes the Console Port interface.

3.3. Connecting an External Modem

When connecting directly to an external modem, use a standard AT to Modem cable. Make certain the modem is initialized at the same baud rate as the NPS (Option Switch 1). The modem must be set to Auto-Answer, in one ring. Please refer to the modem user's guide for more information. Section 4.4 describes the procedure for defining the modem command strings. Appendix A describes the modem port interface.

3.4. Connecting the Network Cable

The Network Port is an RJ45 Ethernet jack, for connection to a TCP/IP network. Connect your 10Base-T cable to the Network Port. Before attempting to access the unit via network, please assign the IP Address, Gateway Address and Subnet Mask as described in Section 4.6.

3.5. Power Supply Connection

The NPS includes two AC inputs. The Bus A input provides power for plugs 1 through 4. The Bus B input provides power for plugs 5 through 8. In order for the NPS to function, Bus A and/or Bus B must be connected to an appropriate power supply.

3.6. Connection to Switched Outlets

The Main Power Switch must be "On" in order for the NPS to operate. When the unit is powered On, the eight AC outlets will be switched On or Off, as specified by the user defined Power-Up Default (see Section 4.5).

- **NPS-115:** Each outlet can switch up to 15 Amps AC. The total for each Bus cannot exceed 15 Amps.
- **NPS-230:** Each outlet can switch up to 10 Amps AC, The total for each Bus cannot exceed 10 Amps.

3.7. Reset Unit to Defaults

If Option Switch settings are changed, the new settings will not be applied until the unit is reset to default settings. There are two ways to reset the unit to defaults:

Note: When these reset procedures are performed, all user selected parameters, including passwords and port names will be lost. Prior to performing these reset procedures, it is strongly recommended to save configuration parameters to an ASCII text file as described in Section 6.

3.7.1. Default Parameters Option

This method allows default parameters to be set without effecting the On/Off status of the NPS's eight switched plugs. To reset the unit to default parameters, proceed as follows:

1. Access the NPS Command Mode (see Section 4.2 or 5.1).
2. At the NPS> command prompt, type **/G** and press **[Enter]**. The General Parameters menu will appear.
3. From the General Parameters menu, type **A** and press **[Enter]**. If command confirmation is enabled, the unit will display a prompt. Type **Y** and press **[Enter]** to proceed with the reset procedure. After a brief pause, parameters will be reset to default values.

Note: If the Default Parameters function is invoked via the Network Port, the IP Address will *not* be reset. If this function is invoked via the Console Port or Modem Port, the IP Address *will* be reset.

3.7.2. Default Button (Local)

Typically, this method is used when devices have *not* been connected to the NPS unit, and you have immediate access to the installation site.

Note: This method will temporarily switch all plugs Off.

Set the Master Power Switch to the OFF position. Press and hold the Default Button, located on the instrument back panel. Place the Master Power switch in the ON position. Wait about 5 seconds, and then release the Default Button.

4. Start-Up / Configuration

4.1. System Mode and User Mode

In order to restrict access to sensitive command functions, the NPS features two separate operating modes; System Mode and User Mode.

The System Mode allows access to all configuration menus, command functions and status screens. When the System Mode is active, Boot/On/Off commands can be directed to *any* of the eight switched outlets. The System Mode Status Screen shows On/Off conditions for all eight switched outlets, and lists currently defined system parameters.

The User Mode allows limited access to command functions and status screens; users are *not* allowed to access configuration menus. When the User Mode is active, Boot/On/Off commands can only be directed to the specific outlets that are "owned" by that individual user. Outlets owned by other users cannot be switched. The User Mode Status Screen only shows conditions at the outlets owned by the user; system parameters are *not* displayed.

When properly configured, the NPS will display a password prompt when the unit is contacted via the Console Port, Modem Port or Network Port. The password entered at this prompt determines whether the unit will start-up in System Mode or User Mode. If the System Password (defined via the General Parameters menu) is entered, the System Mode will be active. If the User Password (defined via the Plug Configuration Menus) is entered, the User Mode will be active.

If the System Password is not defined, the NPS will not display the password prompt, and will always start-up in System Mode. Once the System Password has been defined, individual users can be granted access to specific outlets by assigning passwords to each plug as described in Section 4.5.

4.2. Communicating with the NPS

In order to configure the NPS or invoke command functions, the user must first connect to the NPS and access command mode.

1. The NPS is transparent to parity and will accept 7 or 8 bit characters, but will always answer back at 8 bits, no parity. Make certain your communication program (e.g. ProComm orHyper Terminal) is set for the appropriate baud rate, bits and parity.
 - a) **Via Modem:** Start your communications program. Dial the external modem connected to the NPS. Wait for the Connect message and proceed to Step 2.
 - b) **Via Local PC:** Start your communications program and then press **[Enter]**.
 - c) **Via Network:** During initial configuration, the NPS cannot be accessed via the Network Port. After network parameters have been defined (see Section 4.6), the unit may then be accessed via network as described in Section 5.1.
2. **Password:** If the System Password has been defined, the unit will display the Password Prompt. Key in either the System Password or User Password, and press **[Enter]**. If the system password has not been defined, the prompt will not be displayed.

Notes:

- The Password feature is case sensitive.
 - If you forget the System Password, contact the NPS via the Console Port. When the password prompt appears, press the default button to bypass the password requirement. When the NPS> prompt appears, type **/G** and press **[Enter]** to access the General Parameters menu. Use the General Parameters menu to assign a new System Password.
3. If the System Password is entered, the NPS will display the System Help Screen (Figure 3). If the User Password is entered, the NPS will display the User Help Screen (Figure 4).

```

Network Power Switch v2.04                Site: WESTERN TELEMATIC, INC.

Commands:

Display
/H          Display this Help Screen
/S[P]      Display Plug Status, [P] with Passwords

Configuration
/G          View/Set General Parameters
/P [n]     View/Set Plug Parameters
/N          View/Set Network Parameters
/DL        Download Configuration to File

Control                                         +-----+
/D          Set Plugs to Default Settings | [n] = Optional Plug Name or Number |
/Boot <n>  Boot Plug n                    | <n> = Required Plug Name or Number |
/On <n>    Turn On Plug n                 | n+n = Plug n and Plug n          |
/Off <n>   Turn Off Plug n                | n:n = Plug n through Plug n     |
/T          Reset Network Interface       | * = All Plugs with Access       |
/R          Relogin as Different User     +-----+
/X          Exit/Disconnect

NPS>

```

Figure 3: System Help Screen

```

Network Power Switch v2.04                Site: WESTERN TELEMATIC, INC.

Commands:

Display
/H          Display this Help Screen
/S          Display Plug Status

Control
/D          Set Plugs to Default Settings
/Boot <n>  Boot Plug n
/On <n>    Turn On Plug n
/Off <n>   Turn Off Plug n
/X          Exit/Disconnect

+-----+
| <n> = Required Plug Name or Number |
| n+n = Plug n and Plug n          |
| n:n = Plug n through Plug n     |
| * = All Plugs with Access       |
+-----+

NPS>

```

Figure 4: User Help Screen

4.3. NPS Command/Menu Conventions

When invoking NPS commands and selecting items from configuration menus, note the following:

- All NPS commands can be invoked at the NPS> command prompt, or from the General Parameters Menu, Port Parameters Menus or Network Parameters Menu.
- NPS commands are *not* case sensitive. All NPS commands are invoked by pressing **[Enter]**.
- To select an item from an NPS menu, key in the number for the item and press **[Enter]**. To exit from a menu, press **[Esc]** at any time. Parameters defined up to that point will be saved.
- To display the Help Screen, type **/H [Enter]**.
- The **", Y"** option can be used to temporarily suppress the "Sure?" confirmation prompt. The **", Y"** option is entered at the end of the command line, immediately following the command or argument. For example, to reset the network port without displaying the "Sure?" prompt, type **/T, Y [Enter]**, or to switch off Plug 2 without displaying the "Sure" prompt, type **/OFF 2, Y [Enter]**.

4.4. Defining General Parameters

When the "NPS>" prompt appears, type **/G [Enter]** to display the General Parameters menu (Figure 5). Note that this menu is not available in User Mode. The General Parameters menu offers the following options:

1. **System Password:** (Up to 16 characters, case-sensitive) When the System Password is defined, the NPS will display a prompt before allowing access to command mode. If the System Password is entered, the NPS will start-up in System Mode. To define the System Password, type **1** and press **[Enter]**. (Default = undefined).
Note: If the System Password is not defined, the password prompt will not be displayed, and the NPS will always start-up in System Mode.
2. **Site ID:** Defines a text string (up to 32 characters) that denotes the installation site. To define the Site ID, type **2** and press **[Enter]**. (Default = undefined).
3. **Modem Initialization String:** To define the Modem Initialization String (up to 32 characters), type **3** and press **[Enter]**. For more information on the initialization string, please refer to the user's guide for your external modem. Make certain that the modem is set to auto-answer in one ring. (Default = **ATEOMQ1&C1&D2S0=1**).
4. **Modem Disconnect String:** To define the Disconnect String (up to 32 characters), type **4** press **[Enter]**, and follow the instructions in the submenu. For more information, please refer to the user's guide for your external modem. (Default = undefined).

```

GENERAL PARAMETERS:

1. System Password:      (undefined)
2. Site ID:              (undefined)
3. Modem Init. String:   ATE0M0Q1&C1&D2S0=1
4. Modem Disc. String:   (undefined)
5. Baud Rate:            9600,N,8,1
6. Command Echo:         Off
7. Disconnect Timeout:   30 Min
8. Command Confirmation: On

A. Default Parameters

Enter Selection or <ESC> to Exit ...

```

Figure 5: General Parameters Menu (System Mode Only)

5. **Baud Rate:** The baud rate for the Modem Port and Console Port. To select the baud rate, type **5** press **[Enter]**, and follow the instructions in the submenu. Make certain to select a rate that is compatible with the external modem, and/or the device connected to the Console Port. (Default value is selected by Option Switch 1).

Note: When this setting is changed, the new baud rate will not be applied until the user exits and then re-enters the NPS Command Mode.

6. **Command Echo:** Enables/Disables the command echo. When enabled, commands sent to the NPS will be echoed back to your PC, allowing keystrokes to be displayed. To enable/disable the echo, type **6**, press **[Enter]** and follow the instructions in the submenu. (Default = Disabled).
7. **Disconnect Timeout:** Determines how long NPS will wait for additional commands. For example, if the timeout is 2 minutes, NPS will disconnect after 2 minutes of inactivity. Type **7**, press **[Enter]**, and follow the instructions in the submenu. (Default value selected by Option Switch 4).
8. **Command Confirmation:** When enabled, the NPS will display a prompt before completing the /T, /X, /R, /BOOT, /ON, /OFF, /D and "A" commands, and will also display the System Status screen after these commands are successfully completed. To enable or disable this feature, type **8** press **[Enter]**, and follow the instructions in the submenu. (Default = Enabled).
- A. **Default Parameters:** When selected, the NPS will display a prompt. Type **Y** **[Enter]** to reset the unit to the defaults specified by the Option Switches. When this command is invoked, all menu selected parameters, including port names and passwords, will be lost.

Note: If the Default Parameters function is invoked via the Network Port, the IP Address will *not* be reset. If this function is invoked via the Console Port or Modem Port, the IP Address *will* be reset.

After defining the General Parameters, press **[Esc]** to exit from the General Parameters menu.

```
PLUG #1 PARAMETERS:

1. Plug Name:          (undefined)
2. Password:          (undefined)
3. Boot Delay:        5 Sec
4. Power Up Default:  On

Enter Selection or <ESC> to Exit ...
```

Figure 6: Plug Parameters Menu (Plug 1 Shown)

4.5. Plug Parameters

The Plug Parameters menus are used to assign names and select parameters for each individual switched outlet. There is a separate Plug Parameters menu for each outlet. Note that the Plug Parameters menus are not available in User Mode.

In addition to selecting parameters for each outlet, the Plug Parameters menus also determine which outlets will be controlled or "owned" by each User Password. A separate User Password can be assigned to each plug, or the same password can be assigned to several plugs. When a User Password is entered, the user will have access to all plugs owned by that password.

To access the Plug Parameters menus from the NPS> prompt, type **/P n** and press **[Enter]** where **n** is the number or name of one of the eight switched outlets. The Plug Parameters menu (Figure 6) offers the following options:

1. **Plug Name:** (Up to 16 Characters) Assigns a name to the plug. Typically this name describes the equipment connected to the outlet. When plug names are assigned, Boot/On/Off commands can be invoked using the name *or* number of the desired plug. (Default = undefined).
2. **Password:** (Up to 16 Characters) Assigns a User Password to this plug. When a User Password is assigned, the plug is then "owned" by that User Password. When the password is entered at the prompt, the user will have access to this plug and all other plugs owned by this password. (Default = undefined).

Note: If the System Password is defined, and the plug's User Password is *not* defined, then the System Password will "own" this plug, and only the System Mode will be able to control the plug.

3. **Boot Delay:** During a Boot cycle, power to the plug is first switched off and then switched back on. The Boot Delay is the length of time which elapses between the time when power is switched off and the time that power is restored. The Boot Delay can be 1, 5, 10, 15, 30 or 60 seconds. (Default value is selected by Option Switch 2).
4. **Power-Up Default:** Determines how this plug will react when the /D (default) command is invoked, or after a power interruption. Each plug can be automatically switched On or Off as specified by the Power-Up Default. (Default = On).

After Plug Parameters have been defined, press **[Esc]** to exit from the Plug Parameters menu.

```
NETWORK PARAMETERS :  
  
1.  IP Address :           (undefined)  
2.  Subnet Mask :         (undefined)  
3.  Gateway Address :     (undefined)  
4.  IP Security  
  
MAC Address :           00-40-05-5e-f3-90  
  
Enter Selection or <ESC> to Exit ...
```

Figure 7: Network Parameters Menu (System Mode Only)

4.6. Network Parameters

In order to communicate with the NPS via network, the IP Address, Subnet Mask and Gateway Address must first be defined via the Network Parameters menu. If desired, this menu also allows you to implement IP Security features, which can restrict command mode access based on the user's IP Address.

Settings for network parameters depend upon the configuration of your individual network. Please contact your network administrator for appropriate settings, and then assign parameters as described in this section.

To access the Network Parameters menu (Figure 7), type **/N** and press **[Enter]**. Note that this menu is not available in User Mode. The following options are available:

1. **IP Address:** Defines the IP Address for the NPS unit (Default = undefined). Type **1** press **[Enter]**, and follow the instructions in the submenu.
2. **Subnet Mask:** Defines the Subnet Mask for the NPS unit (Default = undefined). Type **2** press **[Enter]**, and follow the instructions in the submenu.
3. **Gateway Address:** Defines the Gateway Address for the NPS unit (Default = undefined). Type **3** press **[Enter]**, and follow the instructions in the submenu.
4. **IP Security:** Sets up the IP Security feature as described in Section 4.6.1.
5. **Mac Address:** Displays the unit's MAC Address. Note that this item is not used to redefine the MAC Address.


```
IP SECURITY

1. Security Mask #1:      (undefined)
2. Mask #1 Action:       Permit
3. Security Mask #2:      (undefined)
4. Mask #2 Action:       Permit
5. Security Mask #3:      (undefined)
6. Mask #3 Action:       Permit
7. Security Mask #4:      (undefined)
8. Mask #4 Action:       Permit
9. Security Mask #5:      (undefined)
10. Mask #5 Action:      Permit

Enter Selection or <ESC> to Exit
```

Figure 8: IP Security Menu

4.6.1. Implementing IP Security

The NPS can be configured to restrict unauthorized IP addresses from Telnetting to the unit. This allows the user to grant Telnet access to only a specific group of IP addresses, or block a particular IP address from gaining access. In the default state, the NPS accepts incoming IP connections from all hosts. To configure the IP Security feature, proceed as follows:

1. Access the Network Parameters menu as described in Section 4.6. Note that the Network Parameters menu is not available in User Mode.
2. When the Network Parameters menu appears, type **4** and press **[Enter]** to access the IP Security menu (Figure 8).
3. The IP Security menu lists five IP Security "masks" along with the selected permit/deny action for each mask.
 - a) Each Security Mask prompt is used to define a specific IP address or range of IP addresses. Each Mask Action prompt is used to define the permit/deny action for the corresponding Mask.
 - b) Masks are listed in order of ascending priority; Mask 1 has the lowest priority, Mask 5 has the highest priority.
 - c) Masks have a cumulative effect; high priority masks supersede the effect of lower priority masks.
 - d) Each IP Address consists of a series of four eight bit numbers. The number 255 is used as a wild card.

Example 1: Deny access to all hosts except 192.1.1.5:

Security Mask #1:	255.255.255.255	Mask #1 Action:	Deny
Security Mask #2:	192.1.1.5	Mask #2 Action:	Permit

Since 255 is a wild card, Mask #1 blocks all IP Addresses. Mask #2 then specifically grants access to 192.1.1.5 only.

Example 2: Allow access only by addresses that begin with 192.

Security Mask #1:	255.255.255.255	Mask #1 Action:	Deny
Security Mask #2:	192.255.255.255	Mask #2 Action:	Permit

Since 255 is a wild card, Mask 1 blocks all IP addresses. Mask 2 then grants access to all addresses that begin with 192.

Example 3: Allow access only by addresses that begin with 192, deny access to 192.1.1.5.

Security Mask #1:	255.255.255.255	Mask #1 Action:	Deny
Security Mask #2:	192.255.255.255	Mask #2 Action:	Permit
Security Mask #3:	192.1.1.5	Mask #3 Action:	Deny

Since 255 is a wild card, Mask 1 blocks all IP addresses. Mask 2 then grants access to all addresses that begin with 192. Finally, Mask 3 specifically blocks access by 192.1.1.5.

Note:

- Mask #5 has priority over the other four masks. If Mask #5 is set to deny access by "255.255.255.255" (all wild cards), all IP Addresses will be blocked, and you will not be able to access the NPS Command Mode via network. Access will only be allowed via the Console Port or Modem Port.
- When using the wild card address "255.255.255.255" to block access by all IP Addresses, make certain that at least one higher priority mask permits access by your IP address.

4.7. Save Configuration Parameters

After the unit has been completely configured, it is recommended to save parameters to an ASCII file as described in Section 6. This allows quick recovery in the event that the unit is reset to default parameters, or the configuration is accidentally deleted or altered.

5. Operation

Your PC or Control Device must send ASCII characters at the same data rate as the NPS. The unit accepts 8 bits no parity, or 7 bits even or odd parity, but will always answer back at 8 bits, no parity.

5.1. Access the NPS Command Mode

In order to invoke commands, the user must first access the NPS Command Mode. Commands can be sent to the NPS via Network or modem, or from a local PC connected directly to the Console Port. To access the Command Mode, proceed as follows:

1. **Contact the NPS:**

- a) **Via Network:** Telnet to the NPS unit's IP Address. For example, assuming the IP Address is "192.1.1.1", on a UNIX system the Telnet command would be invoked as follows:

```
$ telnet 192.1.1.1 [Enter]
```

Note: If the Telnet connection to the NPS is refused, this probably means that the unit is busy, or that the IP Security feature has denied the connection.

- b) **Via Modem:** Start your communications program (e.g. ProComm or Hyper Terminal). Dial the external modem that is connected to the NPS. Wait for the Connect Message.
- c) **Via Console Port:** Start your communications program (e.g. ProComm) and press [Enter]. Make certain you are communicating via the COM port connected to the NPS.
2. **Password:** If the System password has been defined, a prompt will be displayed. Key in your System or User Password, and press [Enter].
3. **Disconnect:** To end the session, type /X and press [Enter] (or disconnect using Telnet software).

5.2. Displaying Plug Status

The Status Screens display the On/Off state and currently selected parameters for the switched plugs. To display the Status Screen, type `/S` and press **[Enter]**. Note that although the `/S` command is available in both User Mode and System Mode, the System Status Screen includes more information than the User Status Screen.

```

Network Power Switch v2.04   Site: WESTERN TELEMATIC, INC.

Plug | Name                | Status | Boot Delay | Password          | Default
-----+-----+-----+-----+-----+-----
  1  | ROUTER_A             | ON     | 15 Sec    | (defined)        | ON
  2  | ROUTER_B             | OFF    | 15 Sec    | (defined)        | OFF
  3  | DSU/CSU              | ON     | 10 Sec    | (defined)        | ON
  4  | ATMSWITCH_A         | ON     | 10 Sec    | (defined)        | ON
  5  | ATMSWITCH_B         | ON     | 10 Sec    | (defined)        | OFF
  6  | LINUX_1              | ON     | 5 Sec     | (defined)        | ON
  7  | LINUX_2              | ON     | 30 Sec    | (defined)        | OFF
  8  | GATEWAY              | ON     | 30 Sec    | (undefined)     | ON
-----+-----+-----+-----+-----+-----

"/H" for Help

Communication Settings:  9600,N,8,1
Modem Init. String:     ATE0MQ1&C1&D2S0=1
Modem Disc. String:    +++ATZ
Disconnect Timeout:    30 Min
Command Echo:          OFF
Plug Confirmation:     ON

"/H" for Help

```

Figure 9: System Status Screen (Passwords Hidden)

```

Network Power Switch v2.04   Site: WESTERN TELEMATIC, INC.

Plug | Name                | Status | Boot Delay | Password          | Default
-----+-----+-----+-----+-----+-----
  3  | DSU/CSU              | ON     | 10 Sec    | (defined)        | ON
  6  | LINUX_1              | ON     | 5 Sec     | (defined)        | ON
  7  | LINUX_2              | ON     | 30 Sec    | (defined)        | OFF
-----+-----+-----+-----+-----+-----

Disconnect Timeout:    30 Min
Command Echo:          OFF
Plug Confirmation:     ON

"/H" for Help

```

Figure 10: User Status Screen

When the System Mode is active, the /S command will produce the screen shown in Figure 9, which lists status and parameters for all eight plugs, along with Console Port parameters, and modem command strings. Note that in System Mode, the /S command will also accept an argument which will display the User Password for each plug. To display plug passwords, access the System Mode, type /SP and press [Enter].

When the User Mode is active, the /S command will produce the screen shown in Figure 10, which lists the status and parameters only for the plugs owned by the User password entered at login. The User Mode Status Screen does not list the status of plugs owned by other user passwords. In User mode, plug passwords *cannot* be displayed.

5.3. Boot/On/Off Commands

These commands are used to Boot or change the On/Off status of the NPS's eight switched plugs. Commands can be applied to one, several or all owned plugs. Plugs may be specified by name or number.

Note:

- When User Mode is active, commands will only be applied to plugs owned by the User's password. Commands will not effect plugs owned by other users.
 - When System Mode is active, commands can be applied to all eight switched plugs.
 - Wait for the "NPS>" prompt to appear before entering commands. The prompt will not reappear until the previous command is complete.
 - Commands are *not* case sensitive. All commands are invoked by pressing [Enter].
 - If command confirmation is enabled, the NPS will display the Status Screen after the Boot/On/Off commands are successfully completed.
1. **Switch Plug(s) On:** To power-on a plug, type /ON n and press [Enter]. Where "n" is the number or name of the desired plug. For example:


```
/ON 1 or /ON ROUTER
```
 2. **Switch Plug(s) Off:** To power-off a plug, type /OFF n and press [Enter]. Where "n" is the number or name of the desired plug. Note that the "/OFF" command can also be entered as "/OF". For example:


```
/OFF 5 or /OF ROUTER
```
 3. **Boot Plug(s):** To initiate a Boot cycle, type /BOOT n and press [Enter]. Where "n" is a the number or name of the desired plug. Note that the "/BOOT" command can also be entered as "/BO". For example;


```
/BOOT 3 or /BO ATMSWTCH
```
 4. **Suppress Command Confirmation Prompt:** To execute a Boot/On/Off command without displaying the "Sure?" prompt, include the ", Y" option in the command line. The ", Y" option is entered immediately following the command argument. For example:


```
/ON ROUTER,Y or /BOOT 3,Y
```

5.3.1. Applying Commands to Several Plugs

Boot/On/Off commands can be applied to one plug, several plugs, a range of plugs or all plugs as described below:

Note: When commands are applied to several plugs, the NPS will delay for approximately 1 second between plug operations. For example, when switching all plugs On, the NPS will switch Plug 1 On, delay one second, switch Plug 2 On, delay one second, and etc.

1. **Single Plug:** To apply a command to a single plug, enter the number or name for that plug. For example:

/ON 3 or /ON ROUTER.

2. **Several Plugs:** To apply a command to several plugs, enter plug names or numbers with each name/number separated by a plus sign or a space. For example:

/OFF 1+3+7 or /OF ROUTER DSU/CSU

3. **Range of Plugs:** To apply a command to several plugs in sequence, enter the plug names or numbers with each name/number separated by a colon (:). For example:

/BOOT 1:4 or /BOOT ROUTER:DSU/CSU

4. **All Plugs:** To apply a command to all owned plugs, enter an asterisk in place of the name or number. For example:

/ON * or /BO *

5. **Plugs with the Same Name:** If you have assigned an identical plug name to several plugs, all such plugs can be addressed with one command. For example, if plugs 3, 4 and 5 have been named "ATMSWTCH", then all three plugs can be switched with the same command as shown below:

/ON ATMSWTCH or /BOOT ATMSWTCH

5.4. The Default Command

The Default Command (**/D**) sets all plugs to their default On/Off status. The default status is set using the Plug Parameters menus described in Section 4.5. Plugs will be set to these defaults when **/D** is invoked, or after a power interruption. To set all plugs to defaults, type **/D** and press **[Enter]**.

Note:

- When User Mode is active, this command will only be applied to plugs owned by the User's password. The command will not be applied to plugs owned by other passwords.
- When the System Mode is active, this command will be applied to all eight plugs.
- This command will always be applied to all owned plugs. It cannot be applied to only one plug.

5.5. Other Commands

5.5.1. Login as Different User

The /R command is used to re-login using a different password. When invoked, the NPS will display the password prompt, allowing the user to enter a different password in order to access other plugs or command functions. The /R command can be used to switch from User Mode to System Mode.

The /R command is available in both System Mode and User Mode. To login as a different user, type /R, press [Enter], and then key in a different valid password at the prompt. To suppress the "Sure?" prompt, type /R, Y [Enter].

5.5.2. Reset Network Port

The /T command is used to reinitialize the NPS Network card. The /T command is not available in User Mode. To reset the Network Port, type /T and press [Enter]. To suppress the "Sure?" prompt, type /T, Y [Enter].

Note: The /T command can only be issued via the Console Port or Modem Port. The /T command can *not* be invoked via the Network Port.

5.5.3. Exit / Disconnect

To exit from the NPS Command Mode and discontinue connection to the unit, type /X and press [Enter]. The NPS will display the "DISCONNECT" message. To suppress the "Sure?" prompt, type /X, Y [Enter].

5.6. Operating Tips

When connecting to the NPS unit via network, modem or console port, the following factors should be kept in mind:

1. **One Connection at a Time:** Only one port can access the command mode at a time. When a command port is busy, the NPS will react as follows:
 - a) **Network Port Busy:** If a second user attempts to connect via the Modem Port, the NPS will send a busy message. If a second user attempts to connect via the Console Port, the port will not wake.
 - b) **Modem Port Busy:** If a second user attempts to connect via the Network Port, the connection will be refused. If a second user attempts to connect via the Console Port, the port will not wake.
 - c) **Console Port Busy:** If a second user attempts to connect via the Network Port, the connection will be refused. If a second user attempts to connect via the Modem Port, the Console Port will disconnect and the Modem Port will be granted access; the Modem Port has priority over the Console Port.
2. **Ping Packet Size:** The NPS will not accept Ping Packets larger than approximately 1000 bytes.

If you have any questions regarding configuration or operation of the NPS unit, please contact WTI Technical Support as described in Appendix C.

6. Saving and Restoring Configuration Parameters

After the NPS has been properly configured, parameters can be downloaded and saved as an ASCII text file. Later, if the configuration is accidentally altered, the file with the saved parameters can be uploaded to automatically reconfigure the unit without the need to manually assign each parameter.

Saved parameters can also be uploaded to other NPS units. This allows rapid set-up when several units will be configured with the same parameters.

The "Save Parameters" procedure can be performed from any terminal emulation program (e.g. ProComm, Crosstalk, Hyperterminal, etc.), which allows downloading of ASCII files.

6.1. Sending Parameters to a File

1. Start your communications program and access the NPS command mode using the System Level Password.
2. When the NPS command prompt appears, type **/DL** and press **[Enter]**. The NPS will prompt you to prepare your communications program. Set up your communications program to receive an ASCII download, and specify a name for the file that will receive the saved parameters (e.g. NPS.PAR).
3. When the communications program is ready to receive the file, return to the NPS command mode, and press **[Enter]** to proceed.
4. The NPS will send a series of ASCII command lines which specify the currently selected NPS parameters.

A. Interface Descriptions

A.1. Console Port Interface

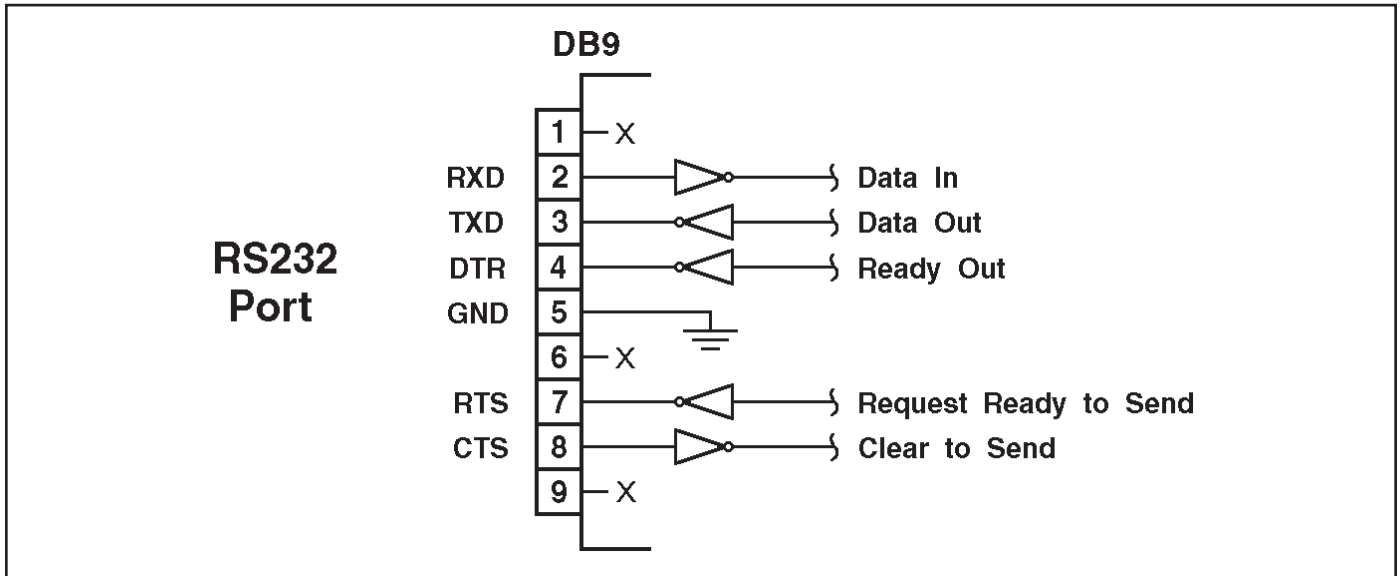


Figure A.1: Console Port Interface

A.2. Modem Port Interface

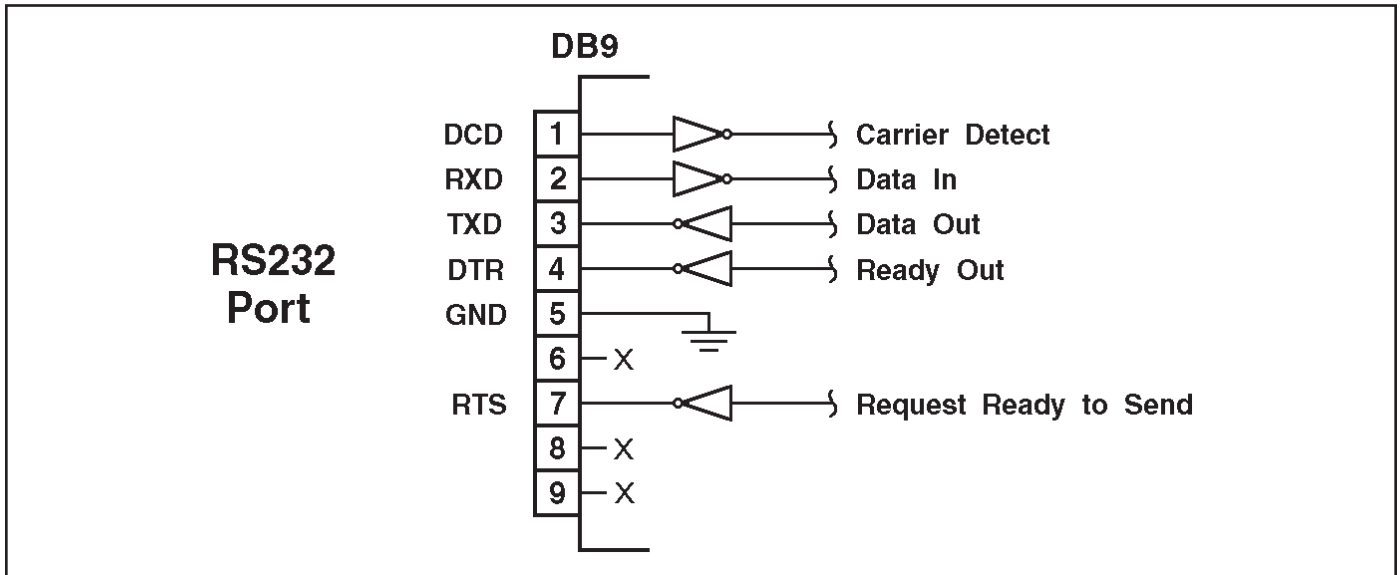


Figure A.2: Modem Port Interface

B. Specifications

Power Input/Output: Model NPS-115 (115 VAC)

AC Inputs: Dual Bus Circuits, 15 Amps each

Voltage: 100 - 140 VAC, 50/60 Hz

Connectors: IEC-320 Inlet, Line Cords Supplied

AC Outputs: Eight (8) Total; 1 - 4 Bus A, 5 - 8 Bus B. (15 Amp Rating)

Connector: NEMA 5-15 Outlet

Load: 15 Amps Total for each Bus

Power Input/Output: Model NPS-230 (230 VAC)

AC Inputs: Dual Bus Circuits, 10 Amps each

Voltage: 205 - 250 VAC, 50/60 Hz

Connectors: IEC-320 Inlet

AC Outputs: Eight (8) Total; 1 - 4 Bus A, 5 - 8 Bus B (10 Amp Rating)

Connector: IEC 320-C13 Outlet

Load: 10 Amps Total for each Bus

Modem and Console Port Interface:

Connector: DB9M, RS232C, DTE

Coding: Serial ASCII, 8 Bits, No Parity

Speed: 2400, 9600, 19.2K, 38.4K bps

Physical / Environmental:

LED Indicators: ON, RDY, RXD, DCD, NET, Outlet ON (1 - 8)

Size: 2.8" x 17" x 6.8" (H x W x D) (W = 19" w/ Rack Mounts)

Weight: 10 Lbs. Shipping Weight

Operating Temperature: 0°C to 45°C

Humidity: 10 - 90% RH, Non-Condensing

Venting: Side Vents, Dissipates 12 Watts Max. (DO NOT BLOCK)

C. Customer Service

Customer Service hours are from 8:00 AM to 5:00 PM, PST/PDT, Monday through Friday. When calling, please be prepared to give the name and model of the unit, its serial number and a description of its symptoms. If the unit should need to be returned for factory repair it must be accompanied by a Return Authorization number from Customer Service.

WTI Customer Service
5 Sterling
Irvine, California 92618

949-586-9950
Toll Free: 1-800-854-7226
Fax: 949-583-9514

Email: service@wti.com

Trademark and Copyright Information

WTI and Western Telematic are trademarks of Western Telematic Incorporated. All other product names mentioned in this publication are trademarks of their respective companies.

Information and descriptions contained herein are the property of Western Telematic, Inc.. Such information and descriptions may not be copied, disseminated or distributed without the express written consent of Western Telematic, Incorporated.

©Copyright Western Telematic, Inc., 2000. All right reserved.

May 2000
WTI Part Number: 12972 Rev. D

Index

A		E	
AC Inputs	5	Exit.	20
Access to Command Mode	8, 16	External Modem	5
B		F	
Back Panel	3	Factory Settings	4
Baud Rate		Front Panel Indicators.	2
Default	4	G	
Operating	11	Gateway Address.	13
Boot Command	18 - 19	General Parameters	10 - 11
Boot Delay	12	H	
Default	4	Hang-Up String.	10
Bus Indicators	2	Help Screen	8, 10
C		I	
Circuit Breakers	3	Interface Description	1
Co-Location Features	7, 12, 18	IP Address.	13
Command Confirmation	10 - 11, 18	IP Security.	13 - 15
Command Conventions	10	L	
Command Echo		LED Indicators.	2
Default	4	Login as Different User	20
Operating	11	M	
Command Mode.	8, 16, 20	MAC Address.	13
Communication	8, 16, 20	Master Power Switch	3
Configuration	10 - 15	Maximum Amps	5
Connecting Devices	5	Modem	
Console Port	3 - 4, 20, 1	Connection	5
Console Port Access	16	Disconnect String	10
Customer Service	3	Initialize String.	10
D		Modem Access	16
Data Rate	11	Modem Port	3, 5, 20, 1
DCD Indicator	2	N	
Default Button	3, 6	NET Indicator	2
Default Command	19	Network Port	3, 5, 13, 20
Default Parameters	5, 11	Access	16
Default Settings	4	Parameters	13
Deny Access	14	Reset.	20
Disconnect	16, 20		
Disconnect Timeout			
Default	4		
Operating	11		
Displaying Passwords	18		
Downloading Parameters	21		
Duplex Mode.	4, 11		

O		R	
Off Command	18 - 19	RDY Indicator	2
On Command	18 - 19	Reset Network Port	20
ON Indicator	2	Reset Parameters	11
Operating Tips	20	Restoring Parameters	22
Operation	16 - 20	RXD Indicator	2
Option Switches	3 - 5	S	
P		Saving Parameters	21
Parameters		Security	7
Restoring	22	Site ID Message	10
Saving	21	Specifications	2
Passwords	7, 20	Status Screen	17 - 18
Displaying	18	Subnet Mask	13
Forgotten	8	Sure Prompt	10 - 11, 18
System	10	Switched AC Outlets	3
User	12	System Mode	7, 20
Permit Access	14	System Password	10
Ping Packet Size	20	T	
Plug Control	18 - 19	Technical Support	3
Plug Defaults	12, 19	Timeout	11
Plug Indicators	2	U	
Plug Name	12	Uploading Parameters	22
Plug Ownership	7, 12	User Mode	7, 20
Plug Parameters	12	User Password	12
Plug Password	12		
Plug Status	17 - 18		
Port Busy	20		
Power Inlets	3		
Power Specifications	2		
Power Supply	3, 5		
Power-Up Default	5, 12, 19		